


BMW OEM Software Esys and TABSCAN J2534 Connection Guide


Note: Please install the BMW OEM software before use. Any questions about OEM software setup please feel free to contact us.

1. Create your TABSCAN account with email or phone number, and log in.

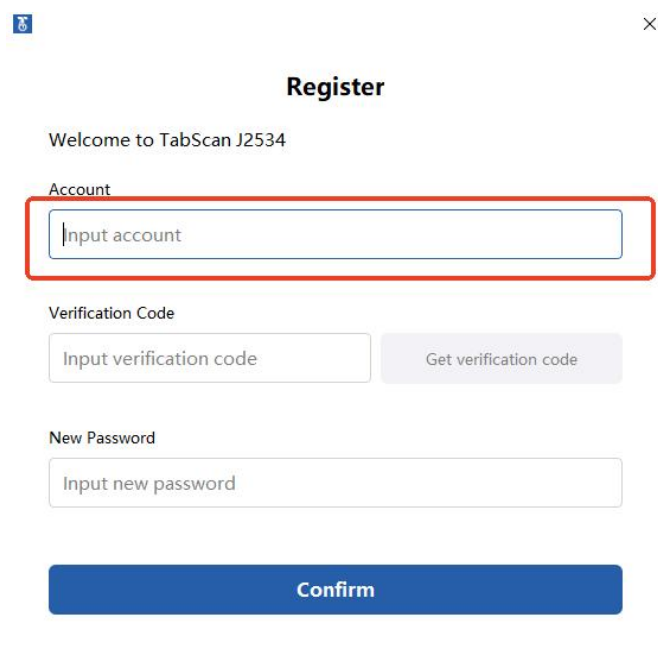


The screenshot shows a registration window titled "Register" for "TabScan J2534". It includes a welcome message, an "Account" input field (highlighted with a red box), a "Verification Code" input field with a "Get verification code" button, a "New Password" input field, and a blue "Confirm" button at the bottom.


2. Connect the device to your PC using the provided USB cable. Check whether there is an update notice on the top left corner. **For optimal performance, please upgrade to the latest firmware version when available on the TABSCAN platform.**

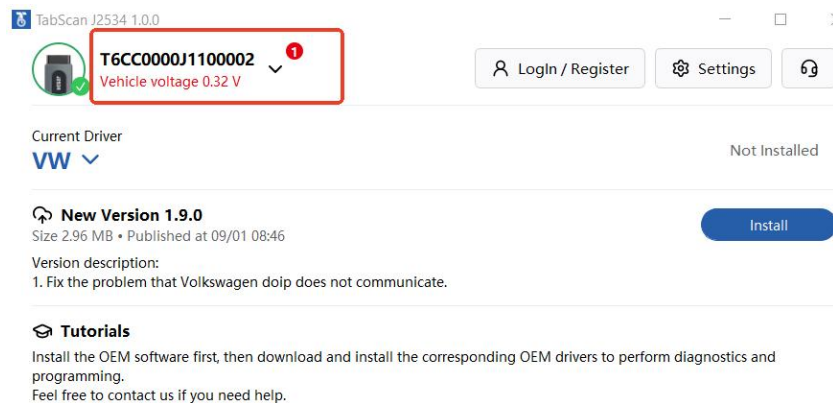


The screenshot displays the TabScan J2534 1.0.0 software interface. At the top left, a red box highlights the vehicle ID "T6CC0000J1100002" and the status "Vehicle voltage 0.32 V". The top right contains "Login / Register", "Settings", and a help icon. Below, the "Current Driver" section shows "VW" with a dropdown arrow and a "Not Installed" status. A "New Version 1.9.0" update notice is visible, including the size (2.96 MB), publication date (09/01 08:46), and a description: "1. Fix the problem that Volkswagen doip does not communicate." An "Install" button is provided for the update. A "Tutorials" section at the bottom explains the installation order: OEM software first, then OEM drivers for diagnostics and programming, and offers contact information for help.

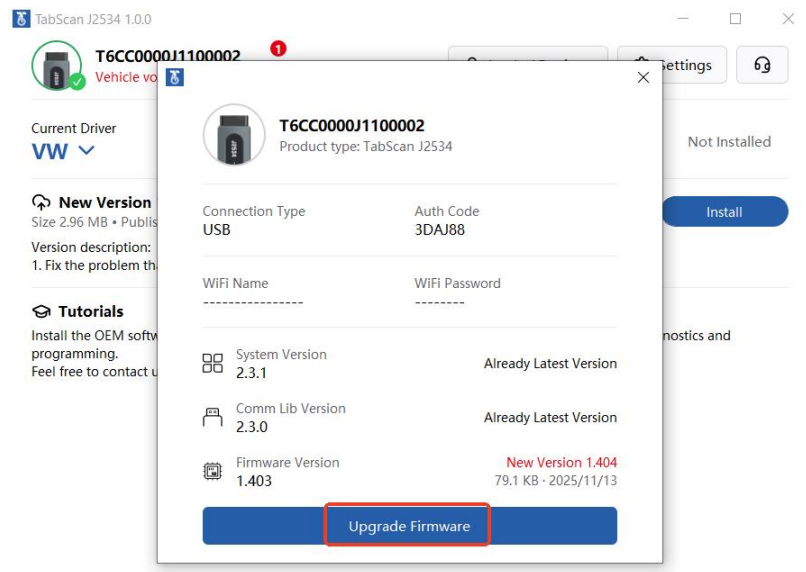


3. Click the drop-down arrow of the current driver, select the **BMW** driver to install.
Note: For the stability of the program, it's better to only have one vehicle brand driver installed at a time.

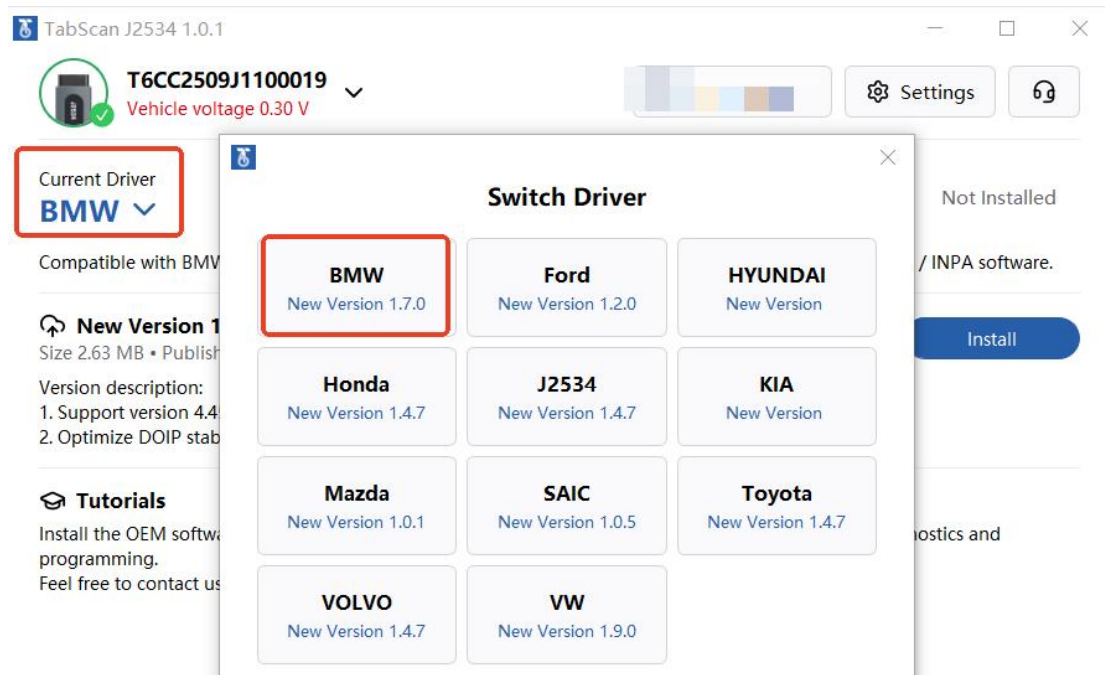


4. Make sure the driver is enabled before using OEM software to diagnose.

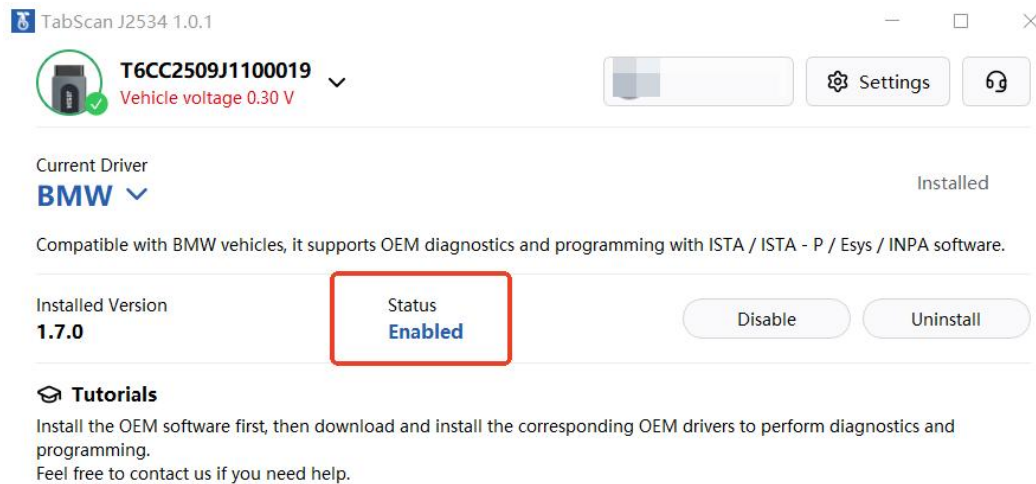


5. Double click the OEM software **E-Sys** icon to open.

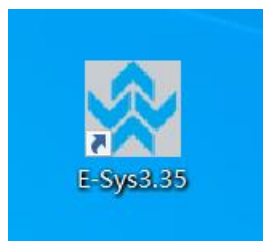

6. Click “OK” to continue.

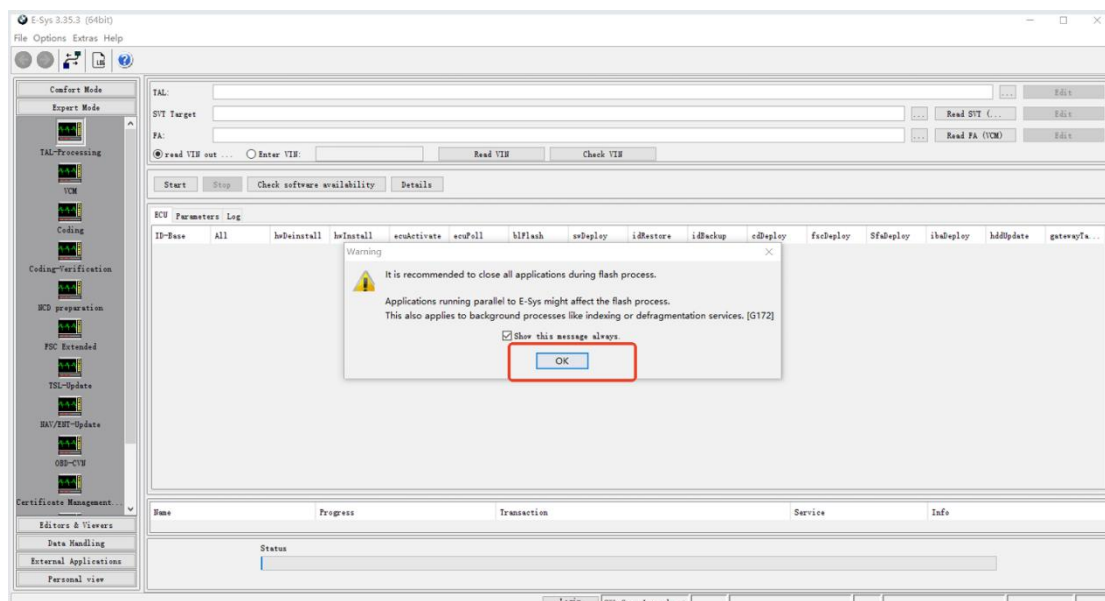

7. Click the vehicle connection icon on the top left corner, choose “ **Connection via VIN** ” when VIN occurs and “**Read parameters from VCM**”, then click “**Connect**”.

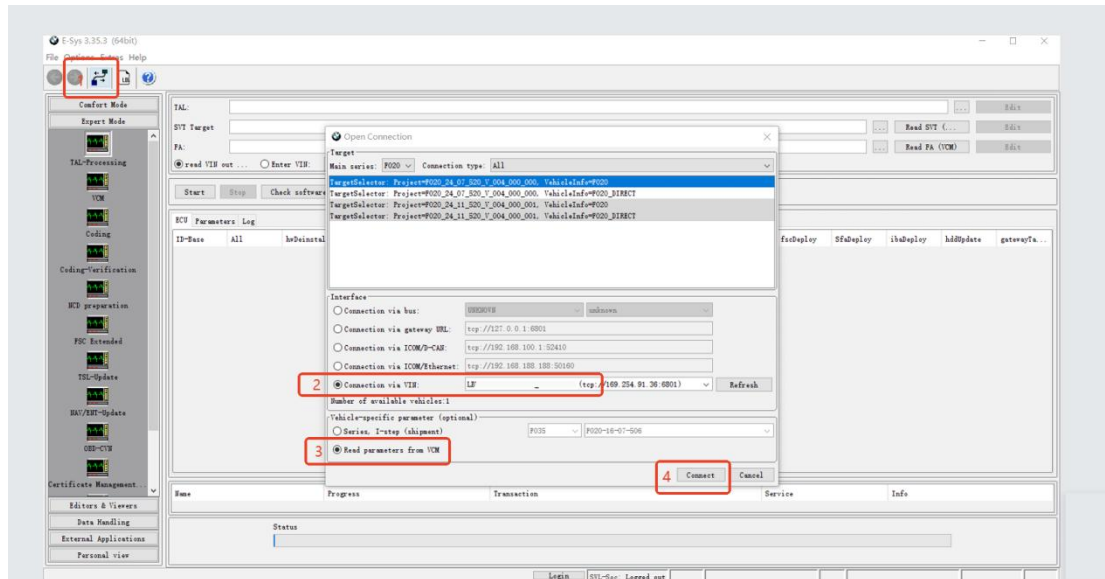

8. Click “**OK**” to start diagnosis.

