


FORD OEM Software IDS/FORSCan and TABSCAN J2534 Connection Guide


Note: Please install the Ford OEM software before use. Any questions about OEM software setup please feel free to contact us.

1. Create your TABSCAN account with email or phone number, and log in.

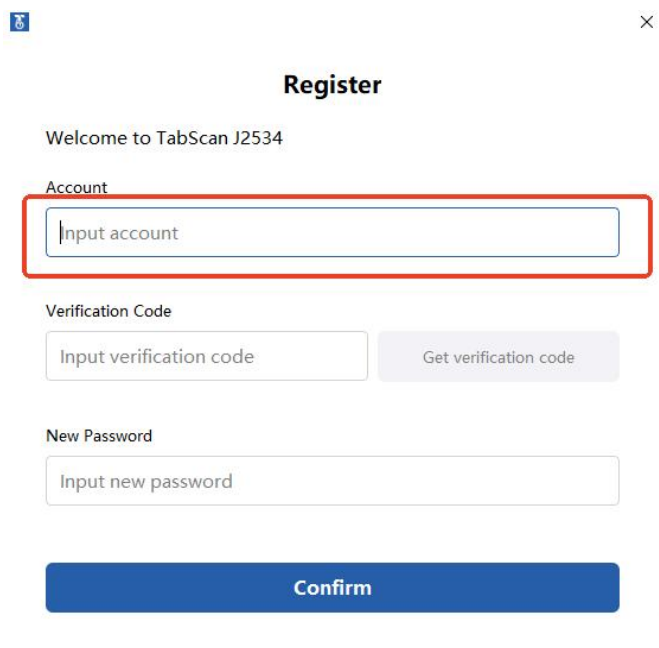


The screenshot shows a web browser window titled "Register" for "TabScan J2534". The page has a white background with a blue header bar. Below the header, the text "Welcome to TabScan J2534" is displayed. The registration form consists of several input fields: "Account" (highlighted with a red rectangle), "Verification Code", and "New Password". Each field has a placeholder text: "Input account", "Input verification code", and "Input new password" respectively. To the right of the "Verification Code" field is a button labeled "Get verification code". At the bottom of the form is a large blue button labeled "Confirm".


2. Connect the device to your PC using the provided USB cable. Check whether there is an update notice on the top left corner. **For optimal performance, please upgrade to the latest firmware version when available on the TABSCAN platform.**

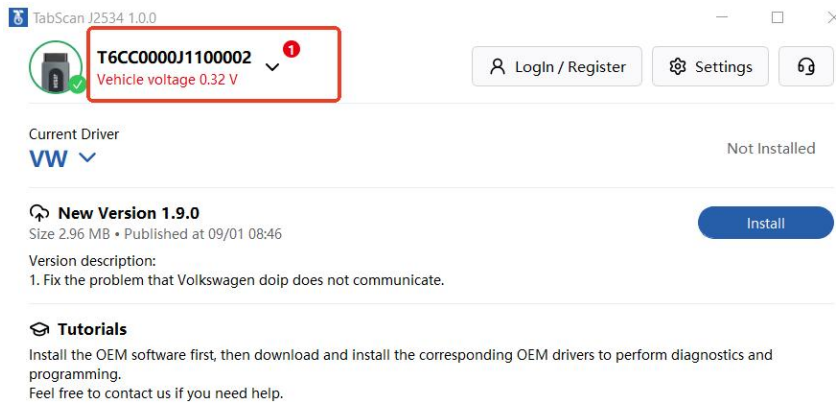


The screenshot shows the TabScan J2534 1.0.0 software interface. At the top, there is a header bar with the title "TabScan J2534 1.0.0" and a red notification badge with the number "1". Below the header, there is a section for "Current Driver" showing "VW" with a dropdown arrow. To the right of this section is a button labeled "Not Installed". Below the "Current Driver" section is a section for "New Version 1.9.0" with a blue "Install" button. The "New Version 1.9.0" section includes the text "Size 2.96 MB • Published at 09/01 08:46" and a "Version description:" followed by "1. Fix the problem that Volkswagen doip does not communicate." At the bottom of the interface is a section for "Tutorials" with the text "Install the OEM software first, then download and install the corresponding OEM drivers to perform diagnostics and programming. Feel free to contact us if you need help."

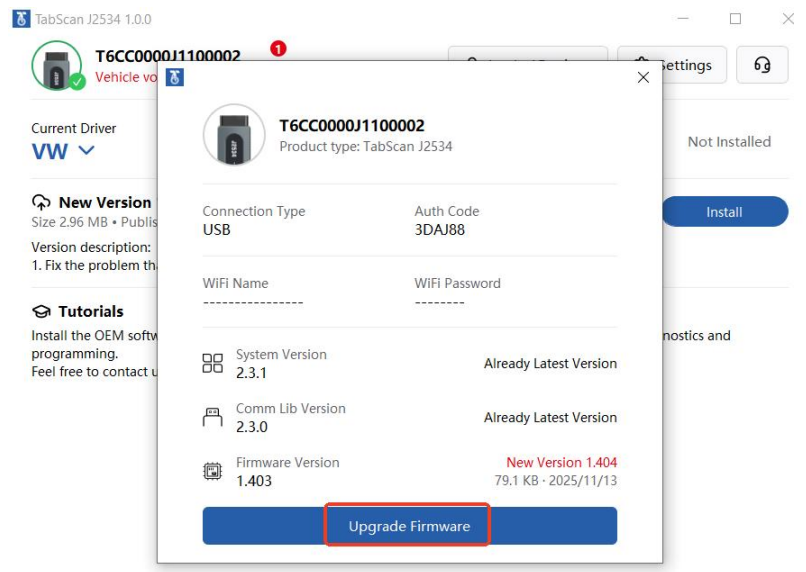


3. Click the drop-down arrow of the current driver, select the **Ford** driver to install.
Note: For the stability of the program, it's better to only have one vehicle brand driver installed at a time.

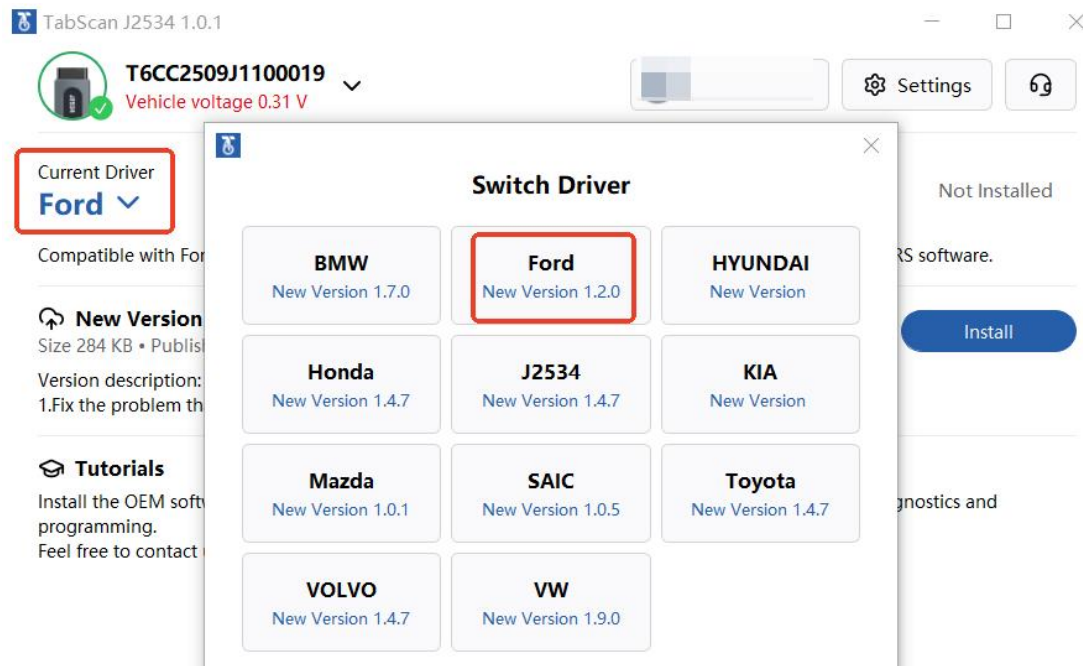


4. Make sure the driver is enabled before using OEM software to diagnose.

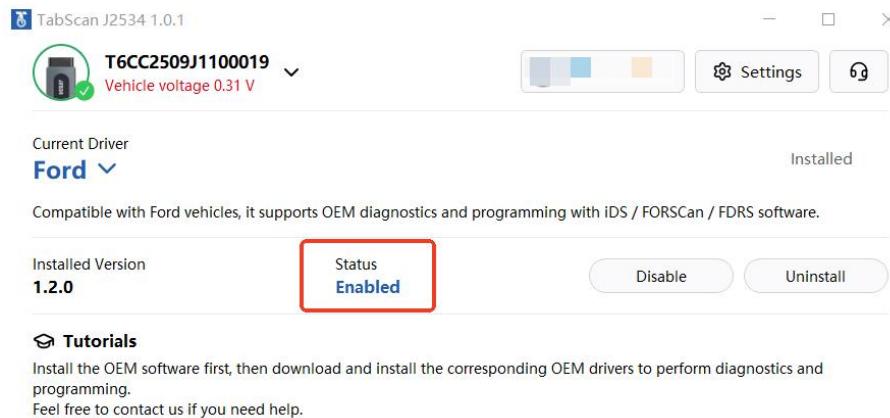


5. Double click the **FORScan** icon to open.

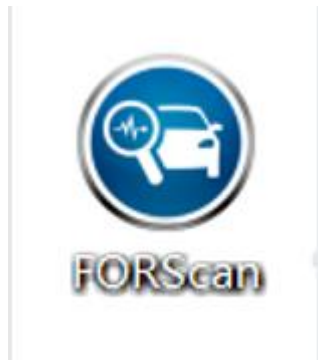

6. Click "**Setting**", choose "**Connection**", and then choose "**VCM3**" under J2534 Adapter.

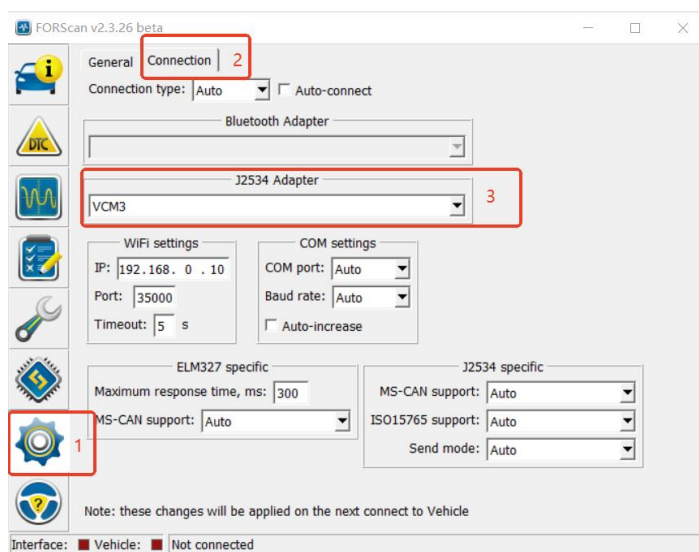

7. Click **“Connect to the vehicle”** to start diagnosing.

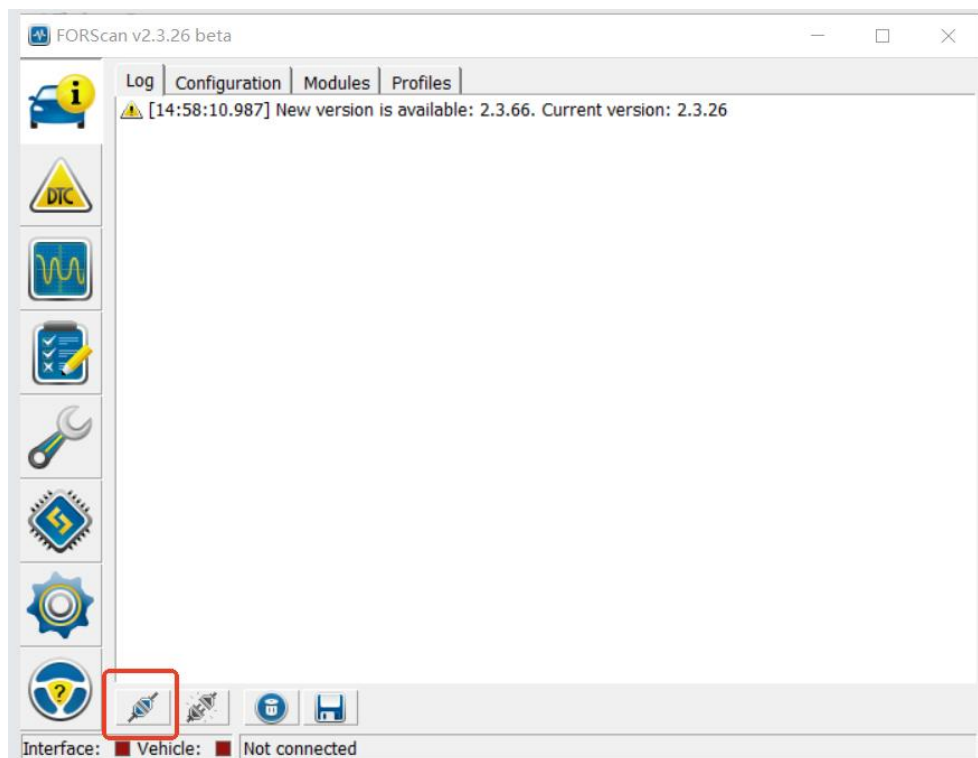


IDS software and TABSCAN J2534 Connection Guide


1. Double click the OEM software **IDS** icon to open.




2. Keep the current selection of VCI type and click “**OK**” to continue

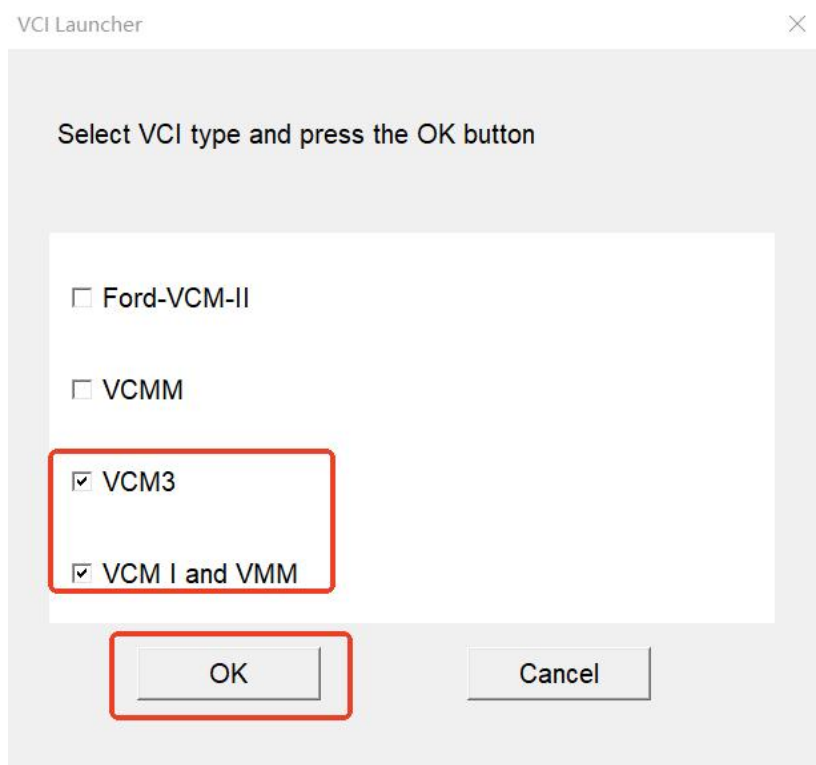


3. Click **the green double arrows** on the top right corner.

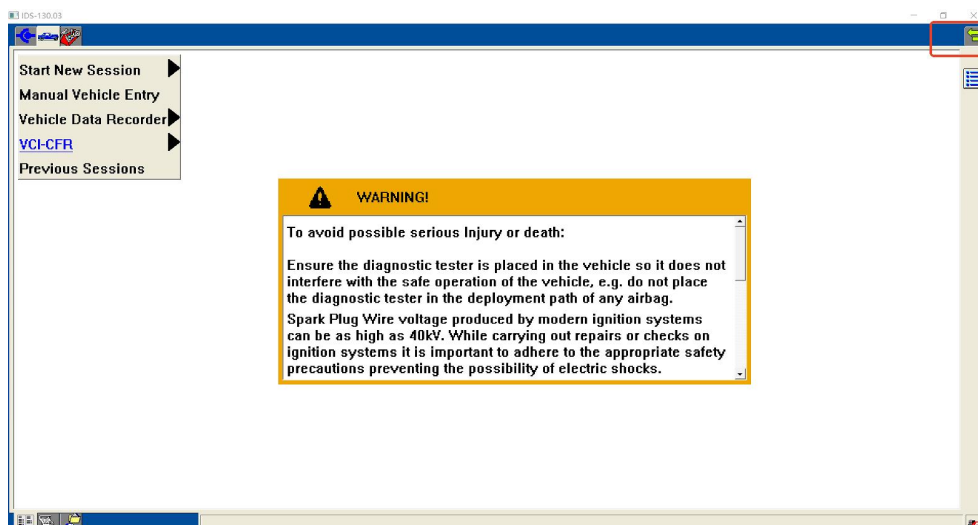

4. The status “**Connected**” indicates a successful connection.

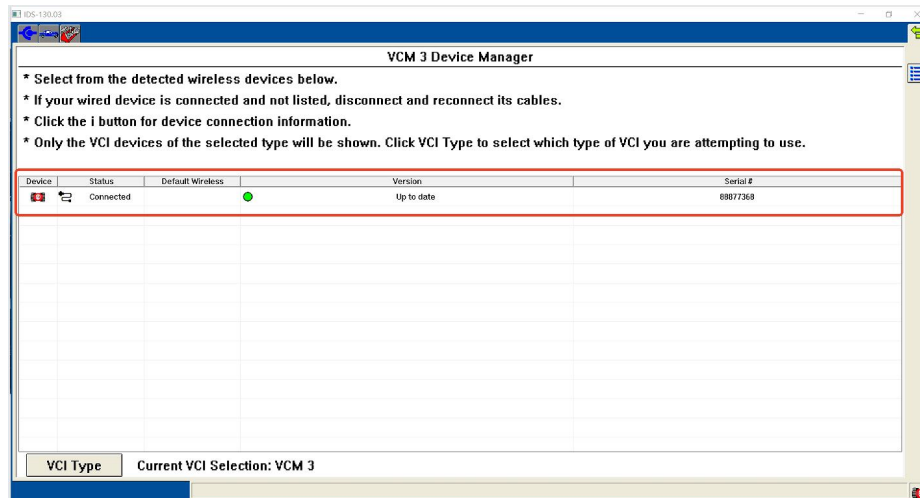

5. Click the car icon on the top left corner, choose “**Start New Session**” to select your vehicle, then click “✓” on the lower right corner to continue.

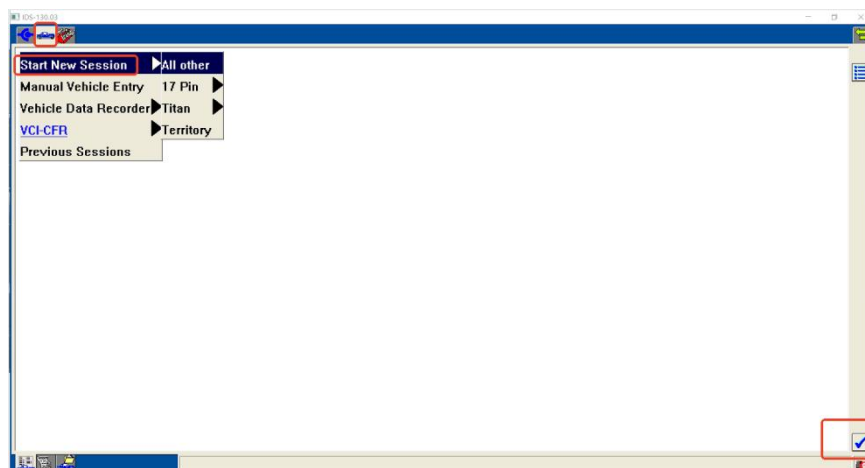

6. Start to diagnose. The system will detect the vehicle automatically.

