


VW/AUDI OEM Software and TABSCAN J2534 Connection Guide


Note: Please install the VW/Audi OEM software before use. Any questions about OEM software setup please feel free to contact us.

1. Create your TABSCAN account with email or phone number, and log in.

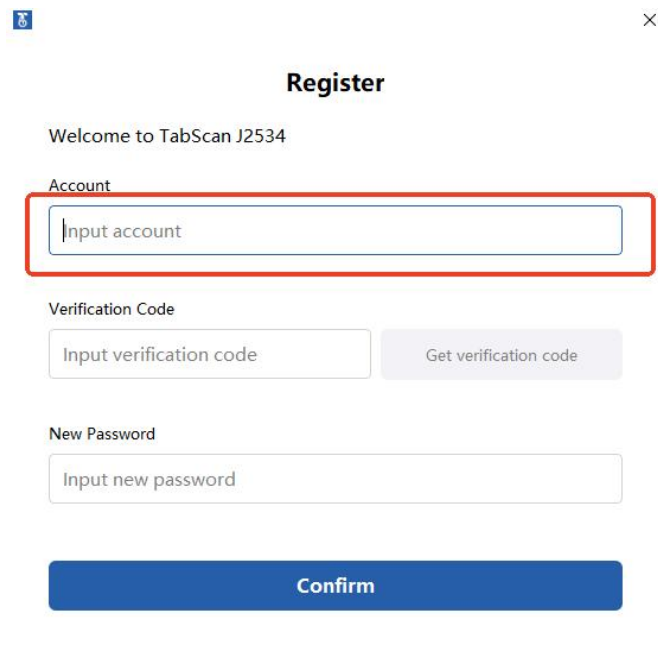


The screenshot shows a web browser window with a registration form titled "Register". The form includes a welcome message "Welcome to TabScan J2534", an "Account" section with a text input field labeled "Input account" (highlighted with a red box), a "Verification Code" section with a text input field labeled "Input verification code" and a "Get verification code" button, a "New Password" section with a text input field labeled "Input new password", and a blue "Confirm" button at the bottom.


2. Connect the device to your PC using the provided USB cable. Check whether there is an update notice on the top left corner. **For optimal performance, please upgrade to the latest firmware version when available on the TABSCAN platform.**

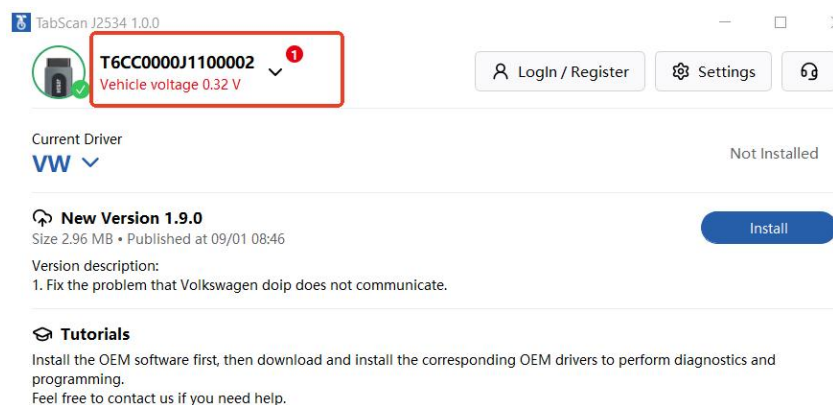


The screenshot shows the TabScan J2534 1.0.0 software interface. At the top, there is a header bar with the title "TabScan J2534 1.0.0" and a red box highlighting the device ID "T6CC0000J1100002" and the vehicle voltage "0.32 V". To the right of the header bar are buttons for "Login / Register", "Settings", and a help icon. Below the header bar, the "Current Driver" section shows "VW" with a dropdown arrow and the status "Not Installed". The "New Version 1.9.0" section displays the size "2.96 MB", the publication date "Published at 09/01 08:46", and a description: "1. Fix the problem that Volkswagen doip does not communicate." An "Install" button is located to the right of this section. At the bottom, the "Tutorials" section provides instructions: "Install the OEM software first, then download and install the corresponding OEM drivers to perform diagnostics and programming. Feel free to contact us if you need help."

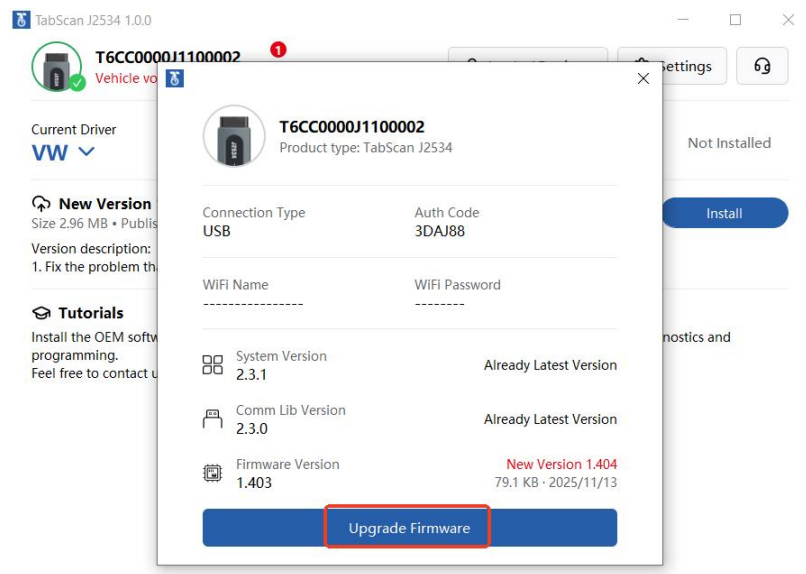


- Click the drop-down arrow of the current driver and select the **VW driver** to install
Note: For the stability of the program, it's better to only have one vehicle brand driver installed at a time.

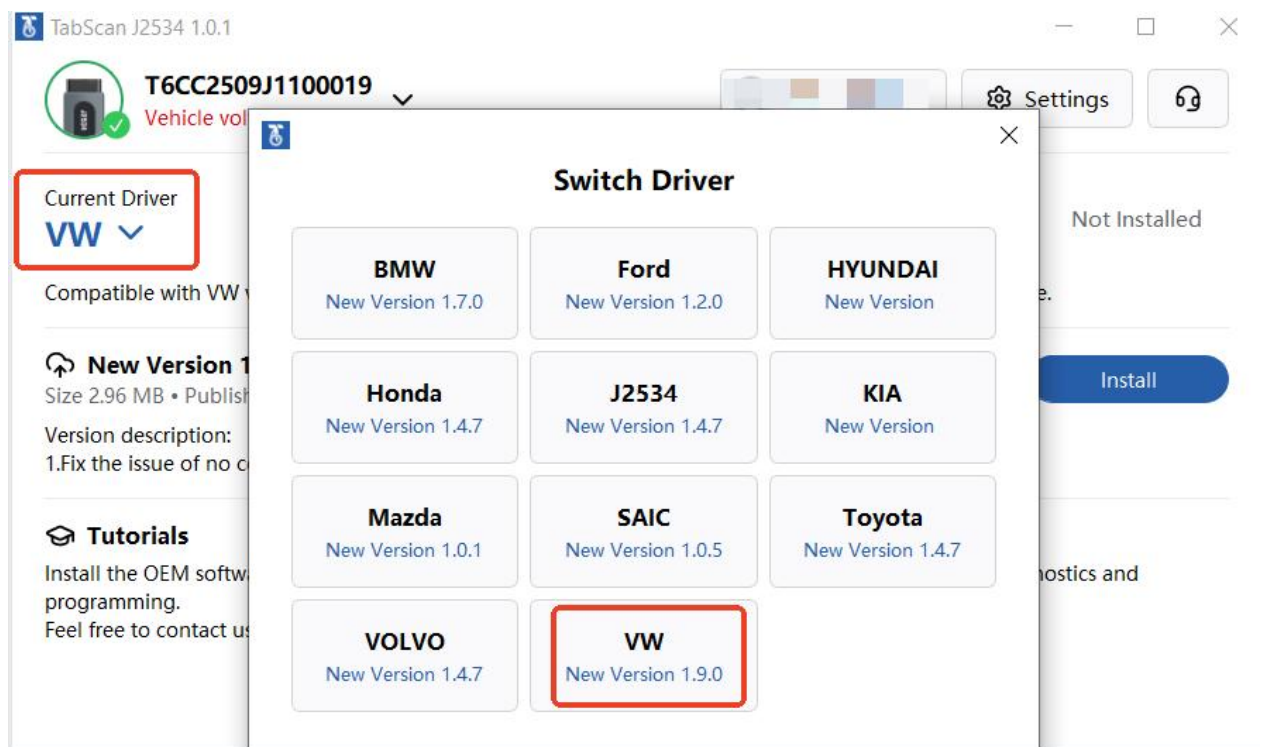


4. Make sure the driver is enabled before using OEM software to diagnose.

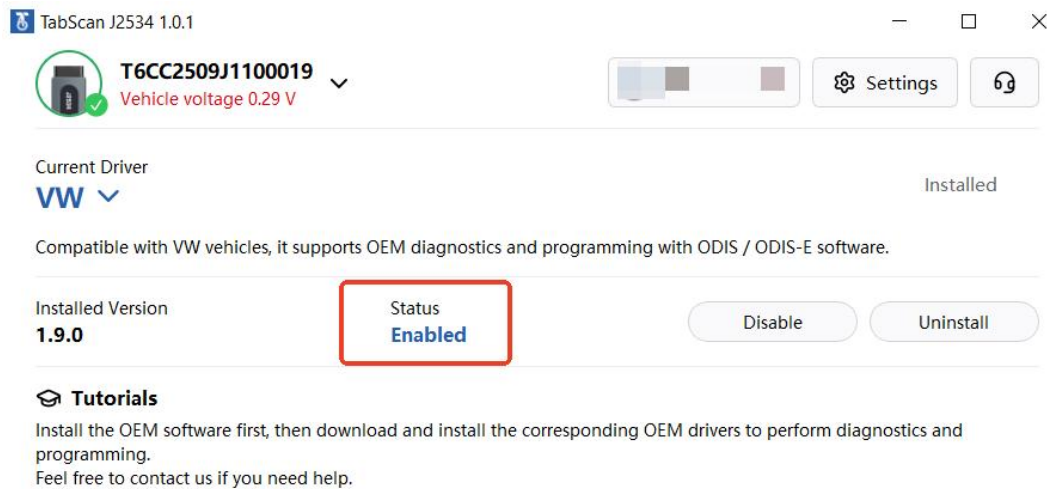


5. Double click the OEM software **ODIS-E** icon to open.

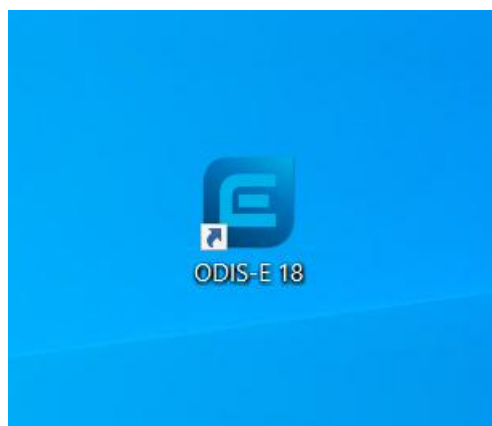


6. Click "Ok".

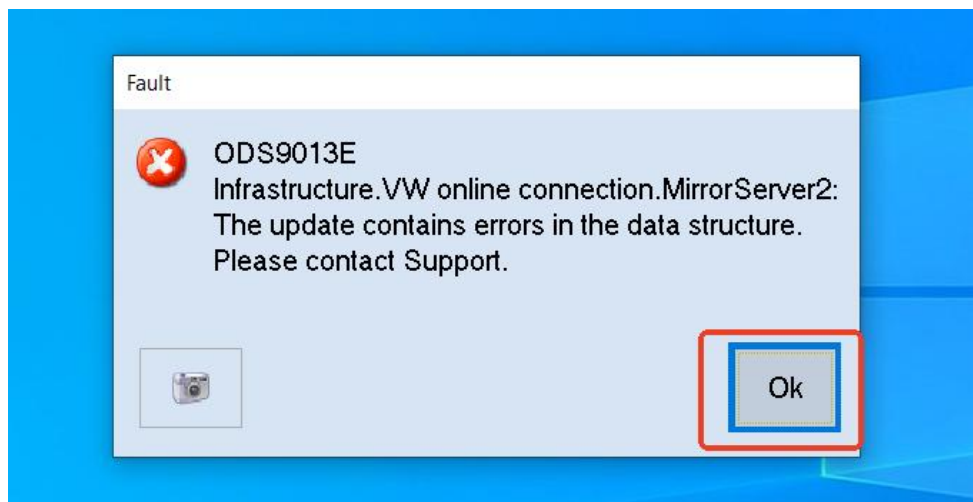


7. Click **"Cancel"**.

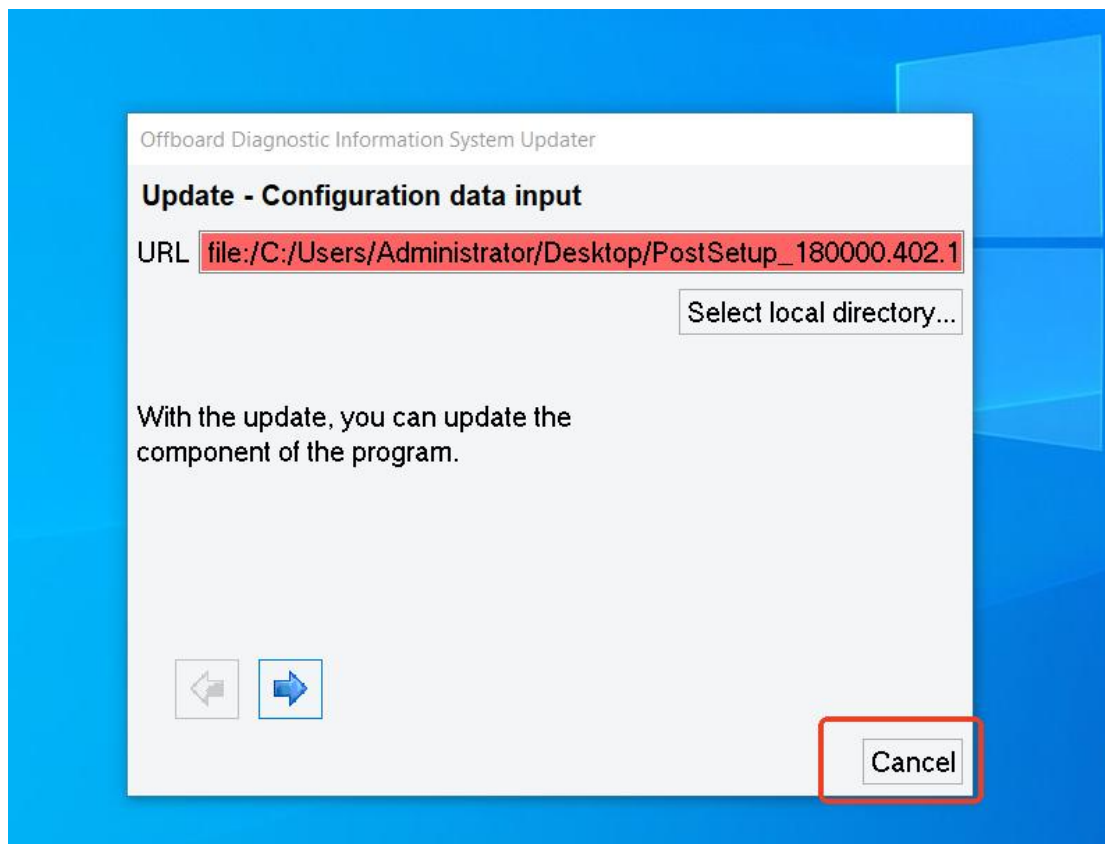

8. Click **"Configuration"**.

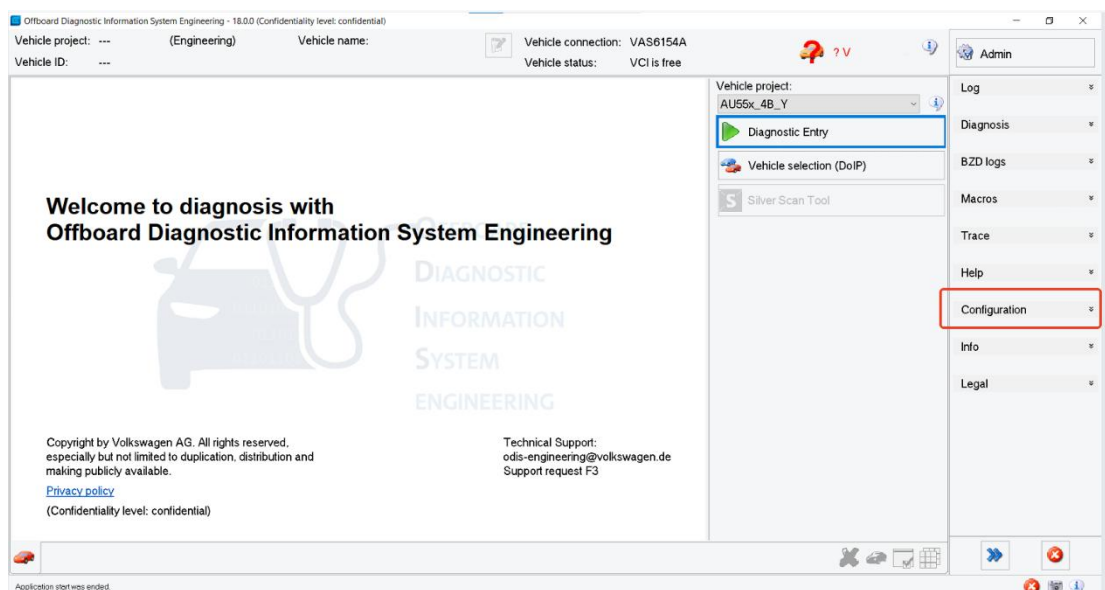

9. Click **“Diagnostic Interface”**, choose the device that appears in **“Diagnostics hardware type”**, then click **“Use selected VCI”**.

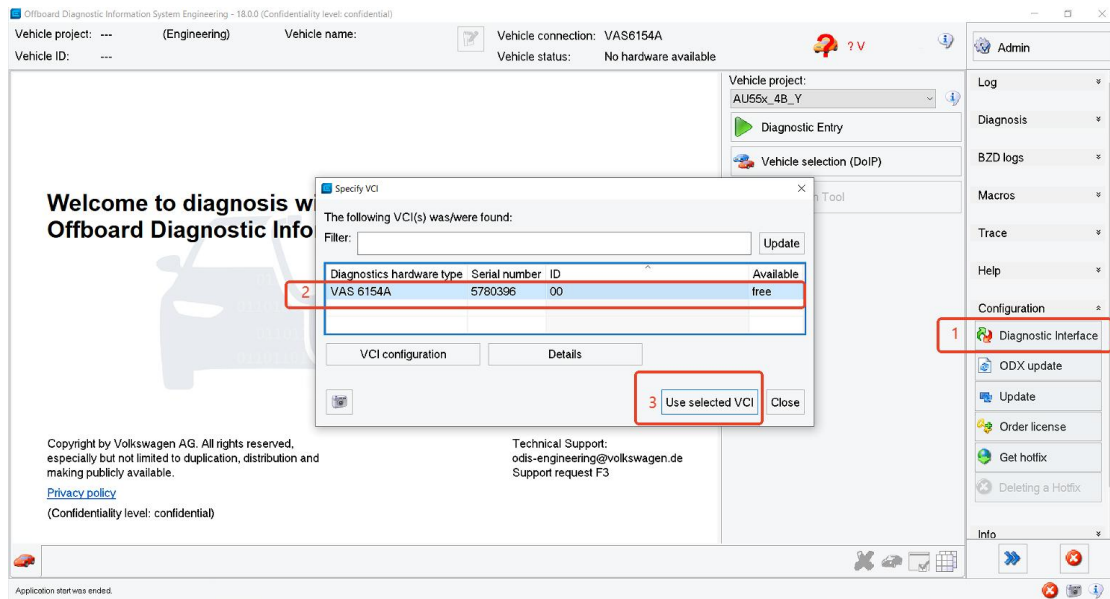

10. Choose vehicle model number under **“Vehicle project”**, then click **“Diagnostic Entry”** to start diagnosis.

