


TABSCAN


Quick User Guide

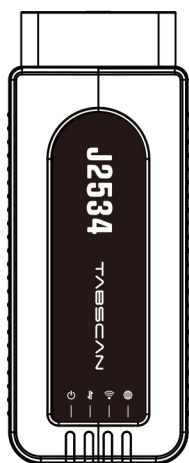

TABSCAN J2534

All-in-One Pass-Thru Device

Product Overview

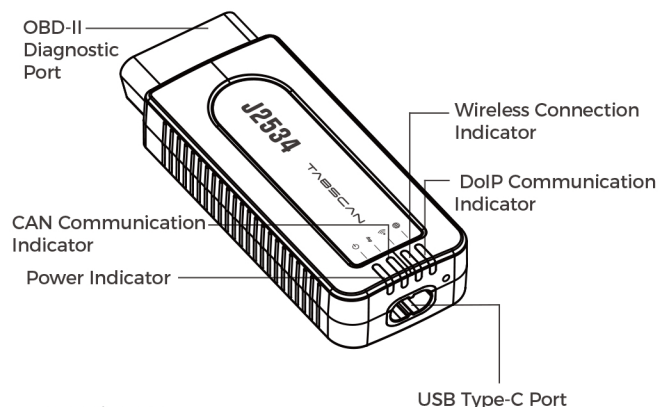

LED Indicators

Power Indicator	Solid Green: Power On
CAN Communication Indicator	Flashing Yellow: Communicating with the vehicle
Wireless Connection Indicator	Flashing Green: PC is Wireless Connected
DoIP Communication Indicator	Solid Blue: Communicating with the Vehicle

1

Download Software and Activate Device

- Go to www.eucleia.net. Download and install the TABSCAN J2534 platform software on a PC running Windows (7, 10, or 11).
Note: To ensure a smooth installation, it is recommended to temporarily disable your antivirus software. TABSCAN Platform is the driver management platform for OEM software. It may be incorrectly flagged as a threat by some antivirus programs.
- Register and log in your TABSCAN account. Connect the device to your PC using the provided USB cable.
Note: For optimal performance, please upgrade to the latest firmware version when available on the TABSCAN platform.
- Download J2534 driver or corresponding driver named by vehicle brand for the OEM diagnostic software.
Note: For the stability of the program, it's better to only have one vehicle brand driver installed at a time.

2

Steps to Diagnose or Program

1. Plug the device into the vehicle's OBD port, then connect the device to your PC using the provided USB cable.

Note: Ensure the ignition is OFF before plugging in the device.

2. Make sure the connection is complete, then open the OEM diagnostic software and select J2534 driver or vehicle brand driver as the diagnostic interface.

Note: Any questions about OEM software setup please contact us

3. Turn the ignition on. You are now ready to diagnose or program the vehicle.

3

Packing List

Accessories	Name	Accessories	Name
	J2534 Pass-Thru Device		Quick Start Guide
	USB A to C Cable		

Warranty Information

12-month warranty for quality-related issues

36-month warranty for special occasions

For any questions regarding the warranty, please do not hesitate to contact us.

Customer Service

E-Mail: eucleia@eucleia.net

Website: www.eucleia.net

Note: Any questions please do not hesitate to contact us, TABSCAN technical support will reply in 24 hours.



EUCLEIA Diagnosis



Eucleia Diagnosis



RoHS



4

TABSCAN